



ATLAS

THE NEXT HEADPHONE

user manual

www.meelec.com

ATLAS

THE NEXT HEADPHONE

Congratulations, and thank you for choosing the **MEElectronics ATLAS Headphones**

Please read this manual in its entirety and visit meelec.com/manual for additional information and troubleshooting

If you have any questions or issues after reading the manual, please contact MEElectronics customer service at

customerservice@meelec.com
or (626) 965-1008


 
 **MGE**[™] brings musical enjoyment to everyone

TABLE OF CONTENTS

Package Contents	1
How to Use	2
Listening to Music/Audio	3
Headset Use	4
Headset Use: Controlling Volume	5
Headset Use: Taking Phone Calls	
Microphone and Remote Use	6
Care and Maintenance	7
Warranty	8
Troubleshooting	9
Specifications	11

Package Contents



ATLAS
Headphones



Protective
Case



Headset
Cable

 


User
Manual

Note: An online version of this manual is available at meelec.com

How to Use


Use the headset cable with smartphones.

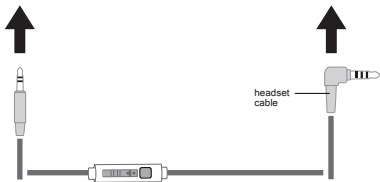

**Plug the 3-pin plug
into the Atlas's
headphone jack**

**Plug the 4-pin plug
into compatible
device**

Listening to Music/Audio

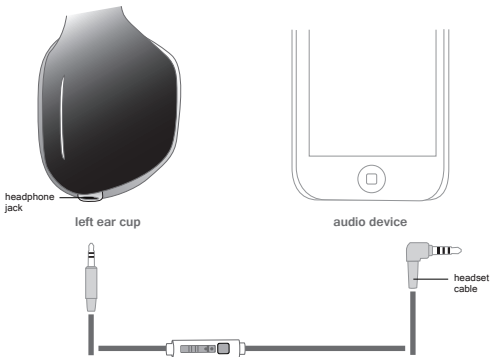


1. Connect the headset cable to the jack on the left ear cup, making sure the plug is firmly seated. Orient the cable so that the microphone is closer to the headphones.
2. Connect the other end of the cable to the headphone jack of your audio device.
3. Adjust the volume on your device and on the headphone cable to a comfortable level

Headset Use

The included headset cable features an inline microphone, remote, and universal volume control. The headset cable is compatible with most smartphones and tablets.

For full compatibility and functionality, including controlling media playback, please visit meelec.com/phone.

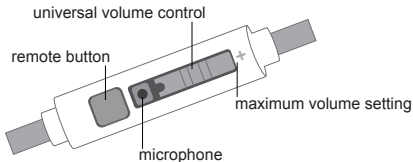

Maximum volume is located when the switch is closest to the + on the remote.

Microphone

The opening for the microphone is located as shown. For best results ensure microphone/remote unit is close to your mouth with the opening facing you

Remote button

Please see pages 5 and 6 for information on using the remote button

Universal volume control

The + symbol indicates the maximum volume position. If you don't hear sound, please check the volume control slider.

Headset Use: Volume Control

The MEElectronics volume control is a universal volume control that will work with any device, and volume setting on your remote will supersede device volume. If you are not hearing any sound, please check the volume control position.

Volume is maximum when the switch is closest to the + on the remote.

Headset Use: Taking Phone Calls

The microphone is directional and needs to be near your mouth to operate properly. If your voice is not transmitted loudly and clearly, adjust the location of the microphone so it is in front of your mouth. At times, poor voice clarity can be a result of poor call connection quality, in which case you should hang up and retry your call.

Functionality for iPhone® and most Android™ phones:

Phone Mode	Button Press	Action
Incoming phone call	Single press	Answer phone call
Phone call in progress	Single press	End call

Note: If you experience issues please make sure no other applications are interfering with remote functionality

Microphone and Remote Use: Controlling Media

Apple device functionality (iPhone, iPad®, iPod touch®):

Phone Mode	Button Press	Action
iPod, iPad, or iPhone with no incoming call / active call	Single press	Play/pause music
	Quick double press	Next track
	Quick triple press	Start track over or previous track
	Press and hold	Activate voice control (iPod Touch 3G, 4G, iPhone 3GS, 4); Activate Siri (iPod Touch 5G and newer, iPhone 4S and newer)

Android device functionality:

Note: Different applications will behave differently, and this is not a guarantee of functionality

Phone Mode	Button Press	Action
No incoming call/active call – functionality depends on the program	Single press	Play/Pause
	Quick double press	Next track
	Quick triple press	Varies with the application

Note: Modern iPhones (2011 and newer), as well as Android devices, support multi-tasking and allow one program to have priority over others, which can affect button functionality. If your remote button is not working, try bringing the program you want the button to work with into focus (active window).

Care and Maintenance

When not in use, store the Atlas in the included protective carrying pouch.

If the device comes in contact with liquids, quickly wipe away. Do not use the device until completely dried.

Note: Liquid submersion voids the warranty

To clean the headphones, wipe with a clean, soft cloth. Do not use harsh cleaners on the headphones.

Warranty

The Atlas Headphones are covered by a 1 year manufacturer warranty against manufacturing defects.

For issues with your product, contact customerservice@meelec.com.

Contact warranty@meelec.com for warranty claims from:

- Within the US or Canada from an authorized reseller (see www.meelec.com/wheretobuy)
- From www.meelec.com
- From the MEElectronics store at Amazon.co.uk

For international retailers or distributors and unauthorized resellers (see authorized resellers at www.meelec.com/wheretobuy) contact your retailer for warranty service.

Limitations:

- This limited warranty does not cover failure of the product resulting from misuse, abuse, accident, neglect, mishandling, or wear from ordinary use or environmental deterioration.
- Environmental deterioration includes exposure to moisture, extreme heat or cold, and sun damage.
- This limited warranty does not cover accessories.
- This limited warranty does not cover consequential damage to other components.
- This limited warranty is null and void for altered products.
- This limited warranty terminates if you sell or otherwise transfer this product to another party.

Troubleshooting

Problem	Solution
No sound	Check that the cable is plugged into the headphones completely and the other end is plugged completely into an audio source, audio is playing, and the volume is loud enough to hear
	Make sure the volume control is not at the minimum position; adjust both the volume on the device and headset cable to a comfortable level
Poor audio quality	Check that the cable is plugged into the headphones completely and the other end is plugged completely into an audio source
	If you are using the headset cable with a computer, laptop, media player, or airplane and the sound improves when you hold the mic button, the 4-pin headset plug may not be compatible; see meelec.com/phone for more details
	Check the audio jack of your device for lint and debris and wipe the plug of the headphone cable firmly with a cloth or paper towel to remove any dirt or oil

Troubleshooting Continued

Problem	Solution
During phone calls the person on the other end can't hear me	Make sure the microphone/remote unit on the cable is closest to the headphones and the microphone is close to your mouth
	Check the compatibility of your phone at meelec.com/phone
	Try unplugging the headset cable and plugging it back in to your phone
	If you are using a computer, you may need an adapter (Skype adapter on meelec.com) to separate the microphone and audio signals
The remote button doesn't work	Make sure the microphone/remote unit on the cable is closest to the headphones and L-shaped end is plugged into the phone
	Check the audio jack of your device for lint and debris and wipe the plug of the headphone cable firmly with a cloth or paper towel to remove any dirt or oil
	Check the compatibility of your device at meelec.com/phone ; if the sound improves when you press the remote button, the device requires an adapter
	Multitasking can prevent the button presses from being recognized; make sure the application you want to work with the remote is the active window

Specifications

Driver:	40 mm cobalt magnet dynamic driver
Frequency response:	20 Hz to 20 KHz
Impedance:	32 ohms
Sensitivity:	113 dB @ 1KHz
Connector:	3.5 mm gold plated, right angle
Cable:	color matched 130 cm (51 in) cord

NOTES

MEElectronics and its logo are registered trademarks of S2E, Inc.
All rights reserved.

iPod®, iPhone®, and iPad® are registered trademarks of Apple Inc.
Android™ is a trademark of Google Inc.



ATLAS

THE NEXT HEADPHONE

Please read this manual in its entirety.
If you have any questions after reading the manual

please contact
MEElectronics customer service at
customerservice@meelec.com



817 Lawson St.
City of Industry, CA 91748

MEElectronics and its logo are
registered trademarks of S2E, Inc.
All rights reserved.