



INCORRECT

cable hanging

down

If you your music sounds tinny or lacks bass, try different ear tips.



6 sets of ear tips are included to ensure you ge the best fit, comfort, and sound.


Select ear tips that:

- Allow the earphone to fit flush in your ear
 Seal with your ear canal and reduce outside noise when inserted

Install ear tips as shown. Make sure ear tip is installed tightly before use.







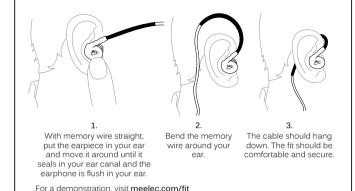



  Tighten the cable cinch and use the shirt clip to control cable movement during activities





MICROPHONE & REMOTE USE

The S6P includes an inline remote with a built-in microphone, button, and universal volume control.

Most smartphones are compatible with the remote and additional functions are available with Apple® and some Android™ devices.


Visit meelec.com/phone for complete compatibility and functionality.

Button Functionality for iPhone® and Android phones:

Phone Mode	Button Press	Action
Incoming phone call	Single Press	Answer phone call
Phone call in progress	Single Press	End call

Volume Control:

 
For maximum volume, move the slider to the + position



SHORT AND EXTENSION CABLE

armband

The Sport-Fi S6P uses a modular cable system to fit your workout style.

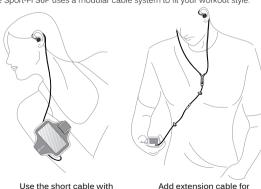

standard use

USING THE ARBMAND

CORRECT

cable over-the-ear

and earphone flush

in the ear

 
Incorrect wear will result in poor fit and sound!

The armband provides a secure and convenient way to hold your device during activities and allows use of touchscreens. Maximum screen size is 4.9".


INCORRECT

earphone not flush

in the ear




FOR LARGE SIZED ARMS:

 

Place the strap through slot B

hole for headphone plug

 
An additional Velcro strip is located in the carrying case to cover the rough Velcro area when necessary to prevent rubbing.



FOR SMALL TO MEDIUM SIZED ARMS:

Contact support@meelec.com if you have any issues.

 FIRST USE: MEMORY WIRE CONFIGURATION



FOR VERY SMALL SIZED ARMS:

Place the strap through slots A and B and fold the strap under itself as shown.



REMOVAL AND REINSERTION DURING WORKOUT USE:

 
If you must remove and reinsert the earphones while working out, dry your ears before reinsertion to avoid getting sweat in the nozzle. Sweat will cause the earphones to slip out and may lead to a temporary reduction/loss of sound.

CARE AND CLEANING

- Do not remove from ears or headphone jack by pulling on the cable.
- Use the included carrying case when not in use.

CLEAN REGULARLY AS FOLLOWS:

- Put a small amount of rubbing alcohol or hydrogen peroxide on a cotton swah
- Remove the ear tips from your earphone and push the cotton swab through the center of the ear tips.
- Clean the outside of the ear tips
- Swab around the nozzles of the earphones
- Wait for the earphones and ear tips to dry completely
- Put the tips back on the earphone



WARNING

Using headphones at high to moderate volumes for extended periods of time will result in permanent hearing damage. Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds.

Visit www.osha.gov for more info.

SAFETY TIPS

It is advised to turn the volume on your device all the way down before connecting your headphones, then gradually increase the volume until you reach a comfortable listening level.

TROUBLESHOOTING

RRANTY

MEElectronics earphones purchased from authorized retailers are covered by a manufacturer warranty.

Visit meelec.com/warranty for warranty information.

MEElectronics and its logo are registered trademarks of S2E, Inc. All rights reserved. iPhone® is a registered trademark of Apple Inc. Android™ is a registered trademark of Google Inc.