



JOURNEY

**STEREO WIRELESS
BLUETOOTH® HEADSET**

model: AF16

USER MANUAL


part of the **AIR-FID** series



PRODUCT OVERVIEW

AIR-FI JOURNEY

STEREO WIRELESS
BLUETOOTH HEADSET

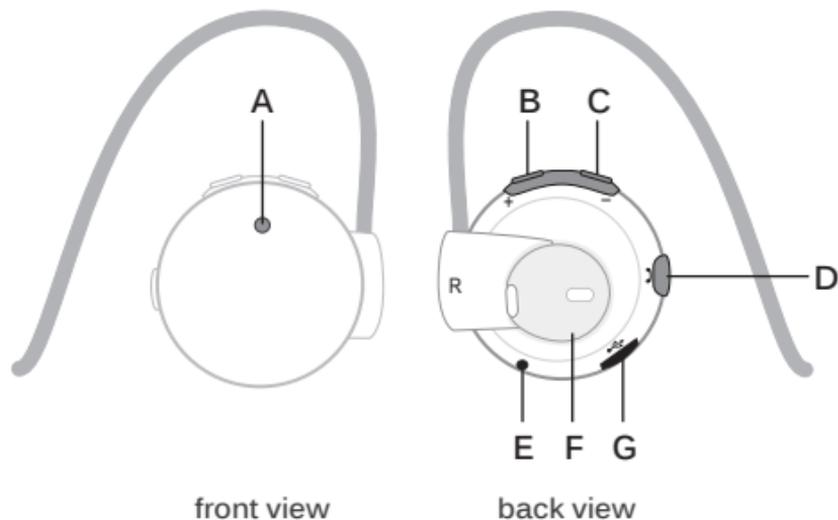

RIGHT EAR PIECE

- | | |
|--|--|
| A LED indicator light | E Microphone |
| B Volume up / skip track button (+) | F Removable silicone earbud cover |
| C Volume down / previous track button (-) | G Micro-USB charging port |
| D Multifunction button (⏸) | |

WARNING

Do not use headphones at high volumes for extended periods of time as doing so will result in permanent hearing damage. It is advised you keep volume levels moderate to low at all times for your safety. Please visit www.osha.gov for more info.

Do not use while driving a car, cycling, operating machinery, or performing other activities that require hearing surrounding sounds. It is advised to turn the music down on your music player before playing media, and gradually increasing volume to a comfortable level.

CHARGING

***** You must completely charge the headset before the first use *****

Connect the USB charging cable to any powered USB port and to the micro USB jack on the right earpiece. Charge time is 2-3 hours. The red LED light will stay lit while charging and turn blue when fully charged.

When the battery is low, the red LED light will flash once every 20 seconds.

Apple devices such as the iPhone®, iPad®, and iPod touch® will display a headset battery indicator when the AF16 is connected.



POWER ON/OFF

To turn on, press and hold the Multifunction button for approximately 2 seconds. The headphone will produce an ascending tone and the blue LED light will flash.

To turn off, press and hold the Multifunction button for approximately 4 seconds. The headphone will produce a descending tone and the red LED light will flash.

PAIRING WITH BLUETOOTH DEVICES

***** Your headset must be paired to a Bluetooth device before it can be used. It is only necessary to pair your headset once with each device. *****

- 1) With the headset turned off, press and hold the Multifunction button for 4 seconds until you see the red and blue lights flashing in an alternating manner to enter pairing mode. Pairing mode will remain active for 3 minutes or until paired.
- 2) Open the Bluetooth menu on the device you wish to pair (see **Locating the Bluetooth Menu** on page 4 for more details). Some devices require you to select "Search for Devices" or "Add New Device" in order to create a Bluetooth pairing.
- 3) Wait until you see "AF16" on your device screen.
- 4) Select "AF16" on your device and follow any further prompts to pair. Use 0000 if a pin is required. Once pairing is complete and a connection is established, the blue LED light will flash several times.

LOCATING THE BLUETOOTH MENU

iPhone, iPad, and iPod Touch

- a) On your device, go to *Settings*
- b) Select *Bluetooth*. If Bluetooth is not on, turn it on. The iPhone/iPad/iPod will automatically search for new devices

Android® Phones and Tablets

- a) On your device, go to the *Settings* menu
- b) Select *Bluetooth* (on older devices Bluetooth is found in the *Wireless & Networks* menu). If Bluetooth is not on, turn it on. Select "Search for Devices" if your phone or tablet does not automatically search for new devices

Windows® Phone 8 Devices

- a) On your device, open the *Settings* menu
- b) Select *Bluetooth*. If Bluetooth is not on, turn it on. The Windows phone will automatically search for new devices

Computers, Laptops, and Other Devices

Visit www.meelec.com/bluetooth for pairing, connecting, and setup information.

If pairing fails after several tries, please refer to your device's user manual for further information. Visit www.meelec.com/bluetooth for instructional pairing videos, troubleshooting, and additional Bluetooth connectivity information.


CONNECTING WITH PAIRED DEVICES

Once the AF16 is turned on, it will automatically connect with the last paired Bluetooth device that is on and within range. If the AF16 does not connect automatically, open the Bluetooth menu on your device and select "AF16" from the Bluetooth device list to connect.

On some computers, Bluetooth audio must be enabled manually every time you connect.

WEARING THE EARPHONES

Identify the right and left channel. The right and left earpieces of the AF16 are not interchangeable, and the cable must be worn over the ear and behind the neck. Put the earphones in your ears, ensuring that the earpieces point into your ear canals. Adjust the cable if necessary to achieve a comfortable and secure fit.

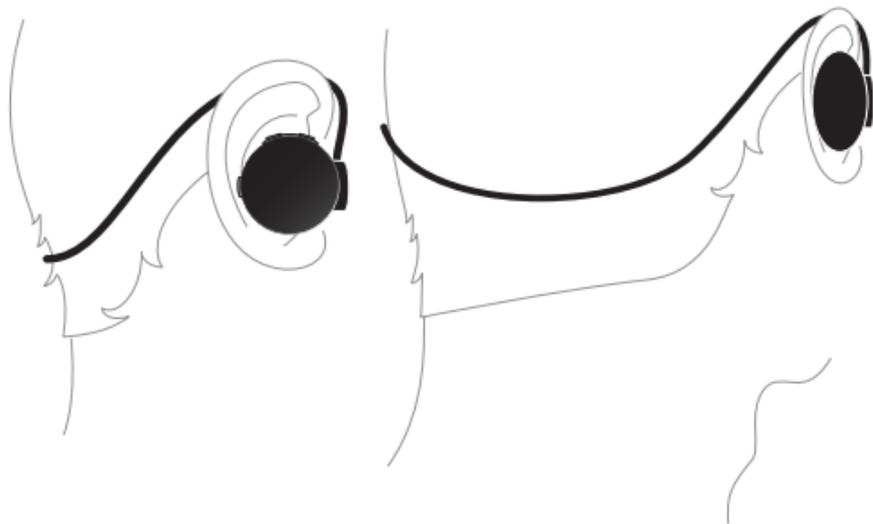

CONTROLS

The AF16 can control media and phone calls from a smartphone or tablet.

1. ADJUSTING THE VOLUME

| FUNCTION | OPERATION |
|-----------------|--|
| Increase volume | Short press the Volume Up (+) button |
| Decrease volume | Short press the Volume Down (-) button |

Note: In standby mode and while playing media, volume adjustments will only change the volume of the headset. Adjust device volume as needed to further increase or decrease the volume. During phone calls the headset will control device volume.

2. CONTROLLING PHONE CALLS

| HEADSET STATUS | FUNCTION | OPERATION |
|---|--|---|
| Incoming call | Answer call | Short press the Multifunction (M) button |
| | Reject call | Press and hold the Multifunction (M) button for 2 seconds |
| Call in progress | End call | Short press the Multifunction (M) button |
| Call in progress, phone handset active* | Transfer call to headset | Short press the Multifunction (M) button |
| Call in progress, second incoming call | Answer new call and hang up current call | Short press the Multifunction (M) button |

*If you answer an incoming call from your phone instead of the headset, most phones will activate the phone handset. Press the Multifunction button to transfer the call to the headset.

CONTROLS

3. CONTROLLING MEDIA PLAYBACK

| STATUS | FUNCTION | OPERATION |
|-------------------------|--------------------------------|--|
| No media playing* | Play media | Short press the Multifunction (⏸) button |
| Media playing | Pause media playback | Short press the Multifunction (⏸) button |
| Media playing or paused | Skip to next track** | Long press the Volume Up (+) button |
| | Restart track/previous track** | Long press the Volume Down (-) button |

*You may need to focus on the media player application for initial playback to start.

** Not all media players support this functionality.

Note: If you answer or make a call while listening to media, the media will be paused until the call has ended.

4. ADDITIONAL FUNCTIONALITY

| FUNCTIONALITY | OPERATION | NOTES |
|---|---|--------------------------------------|
| Redial last call* | Double press the Multifunction (⏸) button | Headset will produce two short tones |
| Activate Siri®/ voice command/ voice dialing* | Long press the Multifunction (⏸) button | Headset will produce a long tone |

*Not all devices support this functionality. For more information, refer to the user manual for your device.

MULTIPOINT

1. MULTIPOINT PAIRING

Multipoint allows two Bluetooth devices to be connected to the AF16 simultaneously. To use two Bluetooth devices with the AF16, first pair each device by following the pairing procedure described in **Pairing with Bluetooth Devices** on page 3 and then turn off the headset. Both devices will need to be paired before multipoint can be used. The device that is paired first will receive priority.

When turned on, the AF16 will automatically attempt to connect to the 2 most recently-paired devices, as long as they have Bluetooth enabled and are within range. If a device that has already been paired does not connect automatically, select "AF16" from the Bluetooth menu of the device. If you no longer wish to connect to multiple devices, disable Bluetooth on the device you do not want connected to the AF16 or remove the "AF16" pairing from the Bluetooth menu of the device.

2. MULTIPOINT FUNCTIONALITY

| STATUS | FUNCTION | OPERATION |
|--|--|---|
| Media playing on one device | Play media on other device | Pause audio playback on the active device and start audio playback on the other connected device* |
| Incoming call | Answer call | Short press the Multifunction () button |
| | Reject call | Press and hold the Multifunction () button for 2 seconds |
| Call in progress, second incoming call on same device | Answer new call and hang up current call | Short press the Multifunction () button |
| Call in progress, second incoming call on other device | Answer new call and hang up current call | Press the Multifunction () button twice |

*It may take up to 10 seconds for audio to switch

Note: Incoming calls will always take precedence over media audio. If two phones are connected to the AF16, an incoming call on either phone will trigger a ringtone alert and media playback will be paused if the call is answered. Once the call is terminated, the AF16 will reactivate the original device and resume playback (with most media applications).

CARE AND SAFETY

- When not in use, power the headphones off and store in a cool, dry place
- Clean with a soft cloth, damp with diluted soap water solution if necessary. Never use chemical cleaners.
- The silicone cushions can be removed from the earpieces and rinsed if necessary.
- There are no user replaceable/repairable parts in the headset. Disassembling it will void your warranty.
- Do not expose the headset to liquids. If submersed in water, do not turn the device on until completely dried. Note: liquid submersion voids the warranty.
- Battery performance will be severely decreased when stored in extreme temperatures: below -10°C/14°F or above 45°C/113°F.

LED STATUS LIGHTS

The blue and red LED lights on the AF16 indicate the status of the headphones as follows:

| STATUS | INDICATOR LIGHTS |
|--|---|
| Charging (USB cable connected) | Red LED light on |
| Fully charged (USB cable connected) | Blue LED light on |
| Connected and in standby mode | Blue LED light flashing twice every 5 seconds |
| Incoming call | Blue LED light flashing quickly |
| Not connected | Blue LED light flashing once every 5 seconds |
| Low battery | Red LED light flashing once every 20 seconds |
| Pairing mode | Red and Blue LED lights flashing in an alternating manner |

SPECIFICATIONS

| | |
|---------------------|----------------------|
| Bluetooth Version | 3.0 |
| Frequency Response | 20Hz to 20kHz |
| Operating Range | approx. 10 m (30 ft) |
| Music Playback Time | approx. 5 hrs |
| Talk Time | approx. 7 hrs |
| Standby Time | approx. 120 hrs |

TROUBLESHOOTING

Visit www.meelec.com/bluetooth for additional Bluetooth information and troubleshooting.

WARRANTY

The AF16 is covered by a 1 year manufacturer warranty. For more information, visit www.meelec.com/warranty.

AIR-FI  JOURNEY

MGC MEELECTRONICS®

MEElectronics and its logo are registered trademarks of S2E, Inc. All rights reserved.

iPhone®, iPad®, iPod touch®, Siri® is a registered trademark of Apple Inc.

Android™ is a registered trademark of Google Inc.

Windows® Phone is a registered trademark of Microsoft Corporation in the United States and other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

and any use of such marks by MEElectronics is under license. Other trademarks and trade names are those of their respective owners.

